



















USA Ph: +1 310-280-9620 Fx: +1 310-838-7294

EUROPE +34-93-757-1335 +34-93-741-4166

**JAPAN** +81-3-44-55-2789 +1 310-838-7294

CHINA +8610 6297 6428 +8610 6297 9584

BRAZIL +55-11-4822-3033 +55-11-4822-3353

**ARGENTINA** +54-11-4571-2388 +54-11-4574-3706


## IMAGING INC. • DELL 3000CN DRUM UNIT CARTRIDGE REMANUFACTURING INSTRUCTIONS




**DISASSEMBLING THE OPC DRUM UNIT** 1. Arrange the OPC drum unit as shown.



2. Turn the drum unit clockwise to commence disassembly on the right side of the OPC drum.

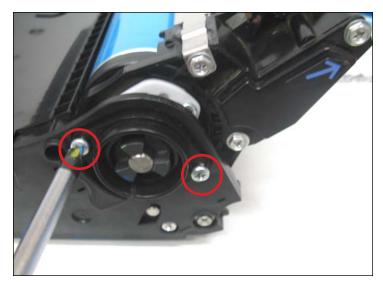

3. Unscrew the plastic drum holder as shown.

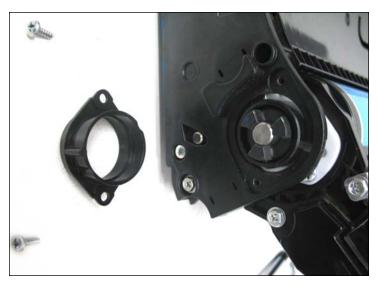

4. Drum holder removed.



















USA Ph: +1 310-280-9620 Fx: +1 310-838-7294 +34-93-757-1335 +34-93-741-4166

**JAPAN** +81-3-44-55-2789 +1 310-838-7294

CHINA +8610 6297 6428 +8610 6297 9584

BRAZIL +55-11-4822-3033 +55-11-4822-3353

## UNINET IMAGING INC. • DELL 3000CN DRUM UNIT CARTRIDGE REMANUFACTURING INSTRUCTIONS



5. Turn to the left side of the OPC drum unit.



6. Using a pair of needle-nose pliers, grip the copper bearing (shown) turning it clockwise to release the OPC drum.



7. Carefully separate the OPC drum from the waste hopper.



8. Separation complete.

















USA Ph: +1 310-280-9620 Fx: +1 310-838-7294


**EUROPE** +34-93-757-1335 +34-93-741-4166

**JAPAN** +81-3-44-55-2789 +1 310-838-7294

CHINA +8610 6297 6428 +8610 6297 9584

BRAZIL +55-11-4822-3033 +55-11-4822-3353

## IMAGING INC. • DELL 3000CN DRUM UNIT CARTRIDGE REMANUFACTURING INSTRUCTIONS

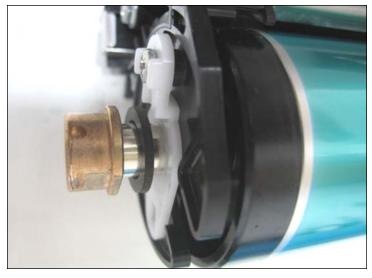

9. Slide off the copper and black bearings (shown) to access the plastic drum axle support.



10. Unscrew the drum axle support as shown.



11. Carefully slide out.



12. Axle support removed.



















USA Ph: +1 310-280-9620 Fx: +1 310-838-7294

+34-93-757-1335 +34-93-741-4166

+81-3-44-55-2789 +1 310-838-7294

CHINA +8610 6297 6428 +8610 6297 9584

BRAZIL +55-11-4822-3033 +55-11-4822-3353

## UNINET IMAGING INC. • DELL 3000CN DRUM UNIT CARTRIDGE REMANUFACTURING INSTRUCTIONS



13. On the right side of the OPC drum, unscrew and remove the plastic bearing (shown).



14. Plastic bearing removed.



15. Now lift the cylinder from the left side to remove.



**DRUM SUPPORT MAINTENANCE** 16. Clean and vacuum the drum unit thoroughly. Assemble following the disassembly steps in reverse.

















USA Ph: +1 310-280-9620 Fx: +1 310-838-7294

**EUROPE** +34-93-757-1335 +34-93-741-4166

+81-3-44-55-2789 +1 310-838-7294

CHINA +8610 6297 6428 +8610 6297 9584

BRAZIL +55-11-4822-3033 +55-11-4822-3353